

SPECIAL INSTRUCTIONS

CARS 6515-6516

BY-PASS SYSTEM



CHICAGO TRANSIT AUTHORITY
TRAINING AND PUBLIC SAFETY DEPARTMENT
REV. 3/73

BY-PASS SYSTEM

A new system of by-passes has been installed on Cars 6515-6516.

The new by-pass system is housed in a panel mounted at eye level forward of the Motorman's cab-side window. It consists of the following push-buttons and associated red indicating lights:

STEM (SIDE TRIP EMERGENCY BY-PASS) BUTTON AND LIGHT

Stem by-pass is used to by-pass emergency circuit defects.

DOOR BUTTON AND LIGHT

Door by-pass is used to by-pass door interlock trouble which cannot be corrected by resetting or cutting out a door.

ATC (CAB SIGNAL) BUTTON AND LIGHT


ATC by-pass is used to by-pass cab signal equipment defects which would otherwise unreasonably delay service.

BY-PASS KEY SWITCH

The by-pass key switch is located near the top on the side of the panel near the cab-side window. When an MUDC key is inserted and turned clockwise, it becomes captive in the switch and

- it activates the three by-pass buttons which are otherwise inoperative, and
- it illuminates a red light facing the windshield and a red light on the rear cab bulkhead facing into the car body.

NOTE: If MUDC key is not removed from the by-pass key switch, the motorman's cab cannot be made up for passenger use.

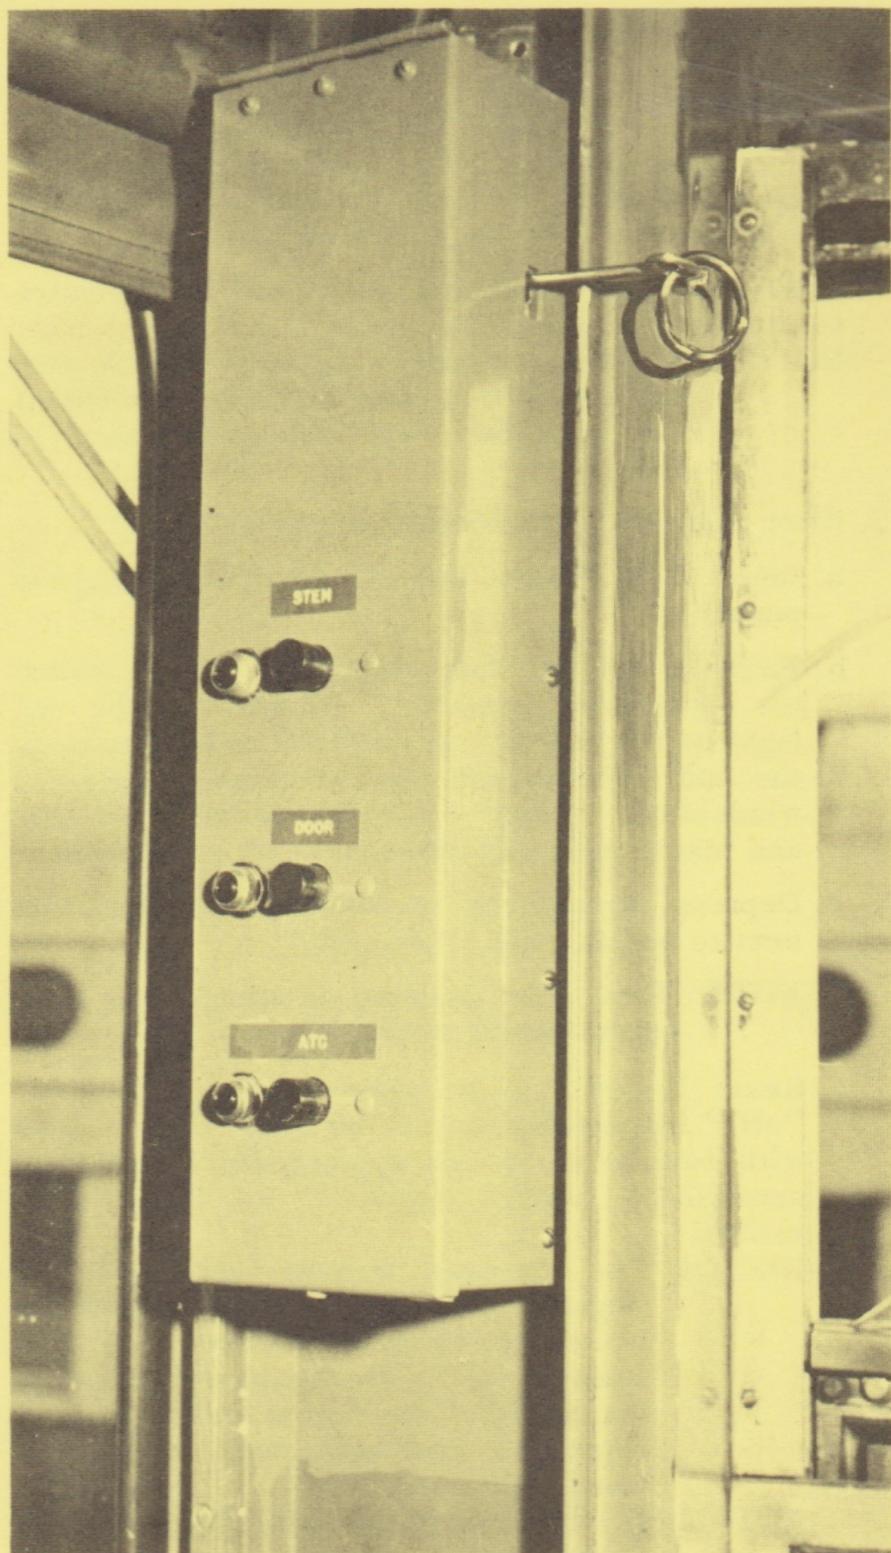

**BY-PASS
PANEL**

BY-PASS PROCEDURE

If in the course of trouble shooting a train for defects in the Emergency Circuit, Door Circuit, or Cab Signal System the trouble shooting procedures specify the use of a by-pass, take the following actions:

1. Notify the Line Supervisor and ask for permission to use the appropriate by-pass.

NOTE: You must not use a by-pass unless permission has been obtained from Line Supervisor or other Supervisory employee in authority.

2. After permission is obtained to use by-pass,
 - a. Insert MUDC key in keyhole mounting of by-pass panel.
 - b. Push in key and turn clockwise. (This makes the by-passes operative, illuminates the red light on the rear of cab bulkhead and illuminates the red light on the by-pass panel facing the windshield, thereby alerting persons outside and inside train that by-passes are operative.)
 - c. Depress appropriate by-pass. (Indicating light next to by-pass will illuminate.)

NOTE: When door by-pass is used, you must operate using buzzer signals.

- d. Reset brakes. When yellow panel light goes "off," by-pass button may be released. Proceed with caution at speeds appropriate to operating conditions, always prepared to stop within vision.

NOTE 1: The by-pass buttons incorporate a magnetic hold down feature which releases whenever the yellow panel light comes "on." To resume operation on the by-pass, the button must again be depressed and held until the yellow panel light goes "off."

NOTE 2: If the magnetic hold down feature doesn't work, depress and hold the appropriate by-pass to operate.

- e. Upon arrival at terminal, deactivate by-passes by removing MUDC key. This will turn off red panel light and red cab light. Fill out a Delay and Defect Report.